


Instructions For Use

See also "General Warnings and EN Safety Instructions", Page 00-00




Your Charging Station.



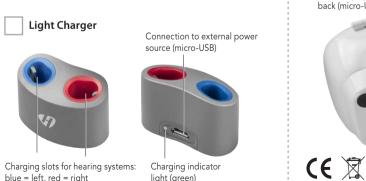

Your Hearing System.

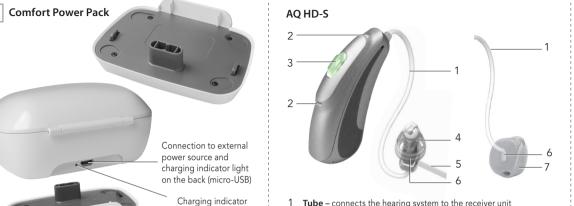

light (green)

Battery control

Charging status

• 0% - 29%

• 30% - 59%

••• 60% - 100%

Comfort Power Pack

Connection to external power source

and charging indicator light on the

back (micro-USB)

- **Tube** connects the hearing system to the receiver unit
- Microphone / Microphone protector

ing on individual settings)

- **Button** Status display when positioning in charging station (LED) - used to select programs and/or adjust volume (depend-
- **Support** prevents dome and tube from slipping out of the ear
- External receiver
- Earmold

Side marking



 


Setting up / Starting the Charging Station.

- Charging stations are used to charge your hearing systems. (AQ hearing systems are delivered already fully charged.)
- Place the charging station on a level surface. Avoid locations with direct sunlight or other sources of heat. Do not cover the charging station (with a towel, for example) while it is charging.
- To start the charging station, please insert the micro-USB plug (a) on the cable provided into the

Then plug the USB connector (b) end into the USB power adapter

and then plug the adapter into an electrical outlet.



Hearing system - Charging using the Comfort Charger or Light Charger.

- The hearing system has a built-in lithium-ion battery.
- Please only charge or use the hearing system within the following temperature range:
- Charge the hearing system for at least three hours before using for the first time
- Make sure the hearing system is dry before connecting it to the charging station.

Starting the charging process

0° to +40° Celsius (32° to 104° Fahrenheit)

- When your hearing systems are situated correctly within the slots, their LED lights will blink green. The hearing systems will be switched off automatically as soon as they are placed in the charging station.
- The charging process will start automatically.

• The cover of the Comfort Charger can be closed during charging.

Interrupting the charging process

- Hearing systems can be removed from the charging station or re-inserted at any time during the charging process.
- Removing the hearing systems from the station before they have finished charging can shorten their running time.

The end of the charging process

- Charging time depends on how much power is left in your hearing systems' batteries, up to a maximum of three hours.
- When the hearing systems are fully charged, the charging station will automatically end the charging process.

The LEDs on the hearing systems will stop flashing and switch to a steady green.

Removing the hearing systems

- Once charging finishes, you can remove your hearing systems from the charging station.
- Switch your hearing systems on.
- Removing the hearing systems from the station before they have finished charging can shorten their running time.

Charging times

100 % charge: 3 hours 80 % charge: 90 minutes

50 % charge: 60 minutes 30 % charge: 30 minutes

Never pull the hearing aids out of the station by the tubes. as this can damage the tubes.

Using the Comfort Power Pack (optional)

The Comfort Power Pack is only usable in combination with the Comfort Charger.

- Charge the Comfort Power Pack for at least three hours before using for the first time
- The Comfort Power Pack has a built-in lithium-ion battery.
- Connect the Comfort Charger to the Comfort Power Pack and use the slider on the bottom to lock it into place.
- Connect the charging cable, then plug it into an external power source. The Comfort Power Pack and the hearing systems will be charged at the same time.

While the Comfort Power Pack is connected to an external power source, the charging indicator light will blink and display current battery status.

 When fully charged, the Comfort Power Pack can charge one pair of hearing systems up to seven times.

To check the Comfort Power Pack's remaining battery capacity, press the battery control button (status indicators will otherwise remain off in order to save power).

Please only charge or use the Comfort Charger / Light Charger or the Comfort Power Pack within the following temperature range: 0° to +40° Celsius (32° to 104° Fahrenheit)

Switching the Hearing System on/off.

On/Off

• To switch a hearing system on or off, press the button with the tip of your finger and hold it down for three seconds, until the LED begins to

1x short flash = hearing system switching on2x short flashes = hearing system switching off

A startup melody will play when the hearing system is switched

Adjusting Volume.



Volume control: louder

Volume control: quieter

Volume control: right-hand system – louder

Change program – right-hand system Volume control - left-hand system - quieter

Change program – left-hand system

left-hand system - quieter

Volume control – right-hand system – louder

Volume setting

With Remote Control

Refer to the remote control user guide.

		-
Suggested volume level	1	1 beep
Turning volume up	1	short beep
Turning volume down	1	short beep
Maximum volume level	11	2 beeps
Minimum volume level	11	2 beeps

Distributed in USA by

Hansaton Acoustics Inc. 13845 Industrial Park Blvd Plymouth MN, 55441

www.hansaton-usa.com order@hansaton.com

Manufactured by

www.hansaton.com

Hansaton Akustik GmbH Sachsenkamp 5 20097 Hamburg Germany



Hansaton Akustik GmbH · Sachsenkamp 5 · 20097 Hamburg · Germany www.hansaton.com

Switching Hearing Programs.

With Pushbutton	No function (deactivated)	
	Change program	
	Combination: Change program – right-hand system Volume control – left-hand system – quieter	
	Combination: Change program – left-hand system Volume control – right-hand system – louder	
With Remote Control		

Refer to the remote control user guide.

Program 1 (e.g. AutoSurround) 1 beep Program 2 (e.g. speech in noise) 2 beeps 3 beeps Program 3 (e.g. PhoneConnect) JJJJ 4 beeps Program 4 (e.g. music) short melody PhoneConnect Opposite ear beeps the same Wireless synchronization as side being adjusted (if enabled)

Hearing Program/Description

1			
2			
3			
4			

Tinnitus Manager

Optional Functionalities.		
Wireless Synchronisation (BiLink)		
• If wireless synchronization is enabled, then changing the volume or program setting on one hearing system, will automatically make the change to both hearing systems at the same time. Wireless synchronization works for both the push button and the lever.		
Please refer all questions concerning your hearing system to your hearing system professional.		
Binaural Phone (BiPhone)		
The Bi feature enables you to hold a phone to one ear and hear the sound clearly in both ears. No accessories are required.		
Power-on-Delay		
 Ensures that the hearing systems only turn on after an automatic delay, in order to avoid feedback (whistling) when the systems are inserted. 		
5 seconds 10 seconds 15 seconds		

If your hearing system professional has configured both a Tinnitus

Manager level while you are in the Tinnitus Manager program.

Manager program and a volume control, you can adjust the Tinnitus

AQ HD S hearing systems are water-resistant but not water-tight. They are robust and durable enough to be worn during all everyday activities, and can occasionally be exposed to extreme conditions

• Never submerge your hearing system in water! AQ HD S hearing systems are not suitable for long, repeated immersions in water and thus may not be worn while showering, bathing or swimming.

• They should still be cleaned and then dried after

 


Advice on Care.



The hearing system is Protection Class IP68 and designed for use in all everyday situations.

coming into contact with water, sweat or dirt.



The hearing system itself, the tube, the receiver, and the dome or

fitting pieces must never be rinsed or submerged in water, as water

electronic components.

in the Comfort Charger.

with a cerumen solvent.

working wax guard.

in the "General Warning and Safety Notes".

This way, cerumen (earwax) cannot dry and harden.

External receiver

droplets can block the sound or cause damage to the hearing system's

Clean surfaces using a lint-free cloth or the cleaning brush included

Only use the handset unit and dome (olive)/ear adapters as described

Clean Domes and earmolds right after removing the hearing systems

Remove cerumen with a soft tissue. If necessary, moisten the tissue

 Domes should be replaced by your hearing system professional every 3-6 months or when they become stiff, brittle, or discolored.

Full functionality of Domes and earmolds is only assured with a

Do not disassemble the earmolds yourself. Ask your hearing system

■ Domes and earmolds are easily damaged when handled

incorrectly. Ensure you do not twist or squeeze the wire

Always make sure the hearing systems and the charging

slots on the charging station are clean and dry before beginning the

when your hearing systems are placed in their case.

professional for help when the earmold needs extensive cleaning.

Remote Control RCV2

you to use a remote control to change the program and volume of your hearing systems. For detailed information and instructions, refer to the

uDirect 3, uStream, uTV3

The uDirect 3, uStream and uTV3 are optional accessories for your hearing systems. For more information on using the uDirect 3, uStream and uTV3, please see the user guide for that accessory. For information on how to get a uDirect 3, uStream or uTV3 accessory, please contact your hearing system professional.

PhoneConnect

Your hearing system professional may have configured a telephone program, which you can reach via the automatic program switching function (PhoneConnect). The magnet on the telephone (optional) provides the magnetic field required to activate the telephone program.

charging process. to your hearing system professional. Never use cleaning products such as household cleaners, soap, or similar products.

The wireless function of your hearing systems allows

user guide, or ask your hearing system professional.

charging.

Your hearing system professional can put together your own individual user manual for you.

Please refer all guestions concerning your hearing system

Hearing System Troubleshooting.

Should a problem occur, you can usually correct it quickly. Use the following troubleshooting tips to resolve simple issues. If you still encounter problems after trying these suggestions, consult your hearing system professional.

Possible Cause

Possible solutions

	. 000.0.0		i ille battery u	
Hearing system does not work.	Dome/earmold is blocked with cerumen (ear wax).	• Clean or replace the dome/earmold.	not last the day.	
	Hearing system is switched off.	 Press the button and hold for three seconds. 	 	
	Battery is completely discharged.	• Charge the hearing system.		
Hearing system whistles.	Hearing system not inserted into ear correctly.	• Insert the hearing system/dome/earmold again.	Charging S	
	Ear wax in ear canal.	Consult your ear, nose, and throat specialist/	Problem	
		doctor/hearing systems professional.	Charging doe	
Hearing system is	Volume too high.	• Lower the volume.	though hearir systems are	
not loud enough or sound is dis- torted.	Low battery.	• Charge the hearing system.	inserted (wit Comfort Pov	
	Dome/earmold clogged.	• Clean dome/earmold.	Pack). The charging	
	Volume too low.	Raise the volume.	process does	
	Hearing has changed.	Consult your hearing systems professional.	not start when using the Con Power Pack.	
Hearing system plays two signal tones.	Indicates low battery.	• Charge the hearing system.	rower Pack.	
Hearing system status display flas- hes rapidly while	Hearing system not correctly inserted into charging station.	Place the hearing system into the charging station correctly.		

	Charging station not connected to a power source.	 Connect the charging station to a power source.
The battery does not last the entire	Hearing system not fully charged.	• Charge the hearing system.
day.	Battery may need to be replaced.	• Consult your hearing systems professional.

Possible solutions

Charging Station Troubleshooting.

Possible Cause

Problem

Problem	Possible Cause	Possible solutions
Charging does not start even though hearing systems are inserted (without Comfort Power Pack).	Comfort Charger/Light Charger not connected to power source.	• Connect the charging station correctly to an electrical outlet or to the Comfort Power Pack.
	Hearing system not correctly inserted into charging station.	• Insert the hearing system into the charging station correctly.
The charging process does not start when using the Comfort	Comfort Power Pack battery is completely discharged.	• Charge the Comfort Power Pack.